


How to unlock the frequency?

Due to FCC policies, the frequency of the newest of TH-9800/TH-7800 was locked, Please use the programming software and follow the step to unlock the full frequency (136-174MHz/400-480MHz).

1. FREE software download through our link that stick on the product box.

2. If you need to download driver, you can download from TYT official website: <https://www.tyt888.com> or download at: <https://tyt888.s3.amazonaws.com/USB+Driver+analog.zip>

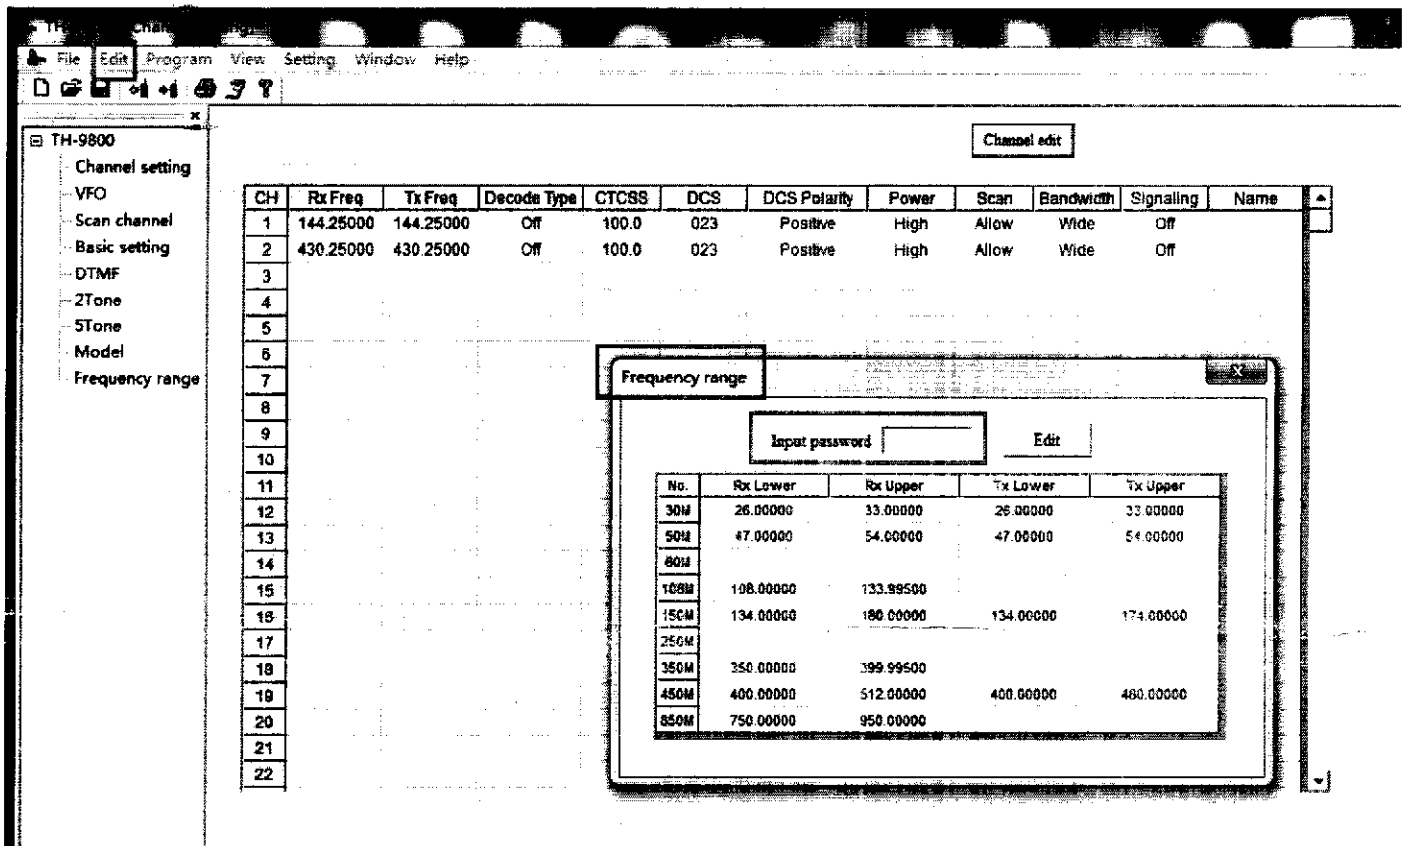

* We recommend use the WIN 7 computer to install it. It support WIN 7/10, NOT SUPPORT MAC;

*The unlock method of TH-7800 is the same as TH-9800, and the password also the same);

1. Press the "Edit" and select the "Frequency range"
2. Press the "Ctrl" key+"F11" key simultaneously, then it will require you input the password (as picture).
3. Input the password "9800TYT" to complete the unlock.
4. Program your frequency at the range of 136-174MHz/400-480MHz.